Jazz JDC77

DIGITAL CAMERA

QUICK START GUIDE

PLEASE READ FIRST

1. BEFORE YOU START

You are required to have:
-Three Alkaline AAA batteries and
-SD/ SDHC Memory Card with max capacity 8GB
(batteries and card are not supplied inside the package)

- Install batteries and install SD/SDHC card to operate camera

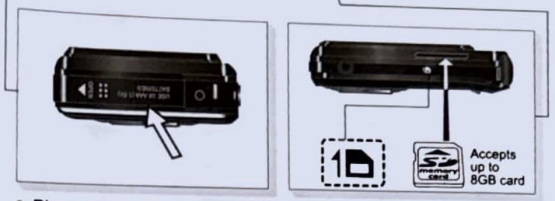

- Please turn camera OFF before removing / replacing SD Card.

1 • Install Batteries 2 • Close Cover 3 • Lock Cover

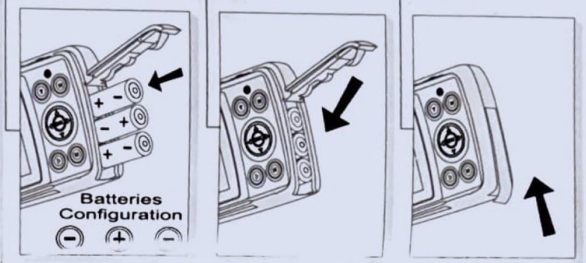

2. STARTING

- Turning camera ON:
  »Press / hold the "POWER button" for 2 to 3 seconds.

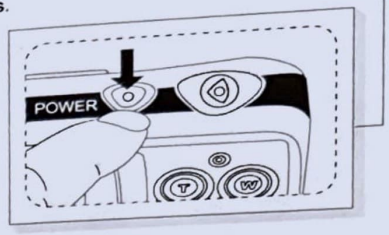

- Turning camera OFF:
  »Press "POWER button" again

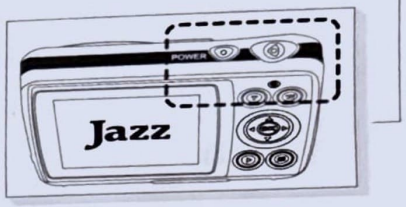

KNOW YOUR CAMERA

CAMERA CONTROLS

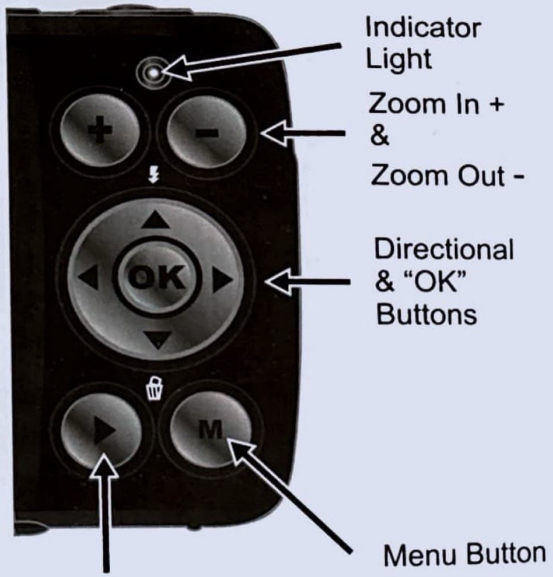

3. USING CAMERA

When camera is activated, it will be automatically set in the process of "photo taking" mode.
»Pressing the MODE button will sequentially set camera in "Recording Video" and "Playback" mode.

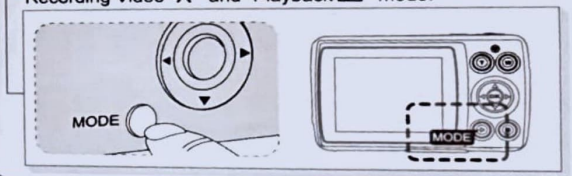

- Photo Taking:
  »Press Shutter Button to take Photo.
- Recording Video:
  »Press Shutter Button to record video. Press again to stop.
- Playback:
  »LCD screen will display latest photo or recorded video with identifying icons.
  »Browse and select photos / video by pressing LEFT/RIGHT button.
  Press Shutter Button to play video and press again to stop playing.

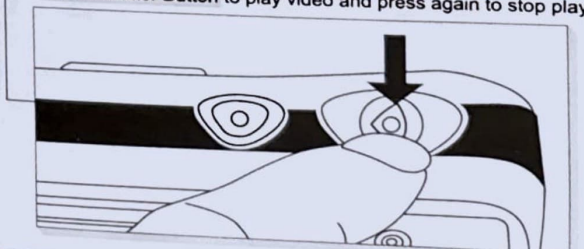

4. DOWNLOADING PHOTOS & VIDEOS / SHARING on YouTube

Install Magix software on supplied CD for enhanced editing/ viewing
or
Install Magix softwear from online download.
www.jazzcameras.com/software

Note:
You can also download videos/ images using pre-installed programs on your PC

- Downloading records to PC:

1»Install MAGIX Video Easy & MAGIX Photo Manager from supplied CD before connecting recorder to computer.

or
Install Magix softwear from online download.
www.jazzcameras.com/software

Downloading Online

All of the software programs and utilities that you find here on the JazzCameras.com/software web site can be downloaded for installation on your computer.

The process of downloading software involves transferring files from this web site to your computer's local hard drive.

The programs and utilities you download from this web site are all distributed as a downloadable link files.

Please refer to the Manual in supplied CD for detailed step by step instruction

2»Use USB cable (supplied with camera) and connect camera to PC. (Turn camera OFF before connecting or disconnecting USB cable.)

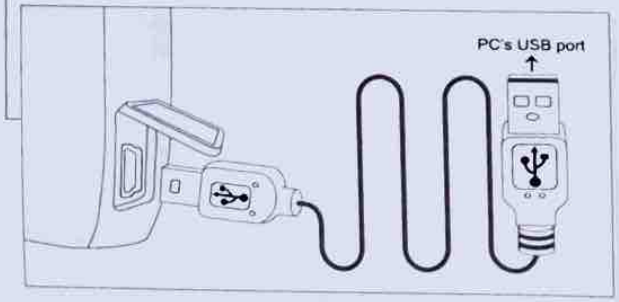

3»Turn ON the camera.

4»Open "My Computer", then find and open the "Removable Disc". Open the "DCIM folder" and find your photos and recorded video. You can select file, play or store on your computer.

- Sharing video on YouTube

1»Installed MAGIX Video Easy provides easy upload of recorded Video to YouTube.

2»To upload your video to YouTube website click "Upload to Internet (YouTube)" in the export dialog. Follow the dialog steps to setup your video for online viewing on YouTube

Please select the desired export option

Finish Project

Burn DVD
Burn your movie onto a blank DVD. It will be able to play back on any conventional DVD player.

Save on Computer
Save your video on your computer. You may also view them on your computer or burn them onto a DVD later.

Upload to the Internet (YouTube)
Upload your movies to YouTube and show them to friends and family or to a worldwide audience(registration required).

Upload to the Internet (MAGIX Online Album)
Upload your movies to YouTube and show them to friends and family or to a worldwide audience(registration required).

5. HELPFUL HINTS

- When camera displays **"Card Locked!" message**:

» You need remove the SD card, "un-lock" it and insert card again

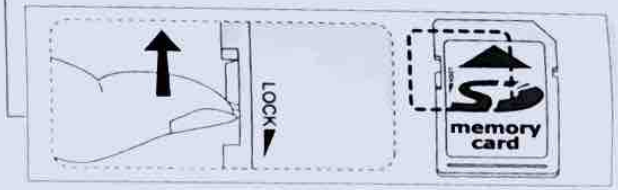

- If the operation or displayed video or still picture is interrupted for any reason:

»Reset camera by Disconnecting the batteries for a few seconds and Reconnecting them again to reset and resume operation.

6. NEED HELP?

Please do not return product.

Please call for assistance.

Customer Service Support:
E-mail: support@jazzcameras.com
www.jazzcameras.com
1 732 215-4022

Please read supplied Manual Booklet

for more information and detailed instructions

JDC77 QSG120718E